

CALIFORNIA EXOTIC OH MY G-SPOT VIBRATOR



User manual

CONTROL

- 1) Unscrew the cap and insert the batteries according to the poles.
- 2) After screwing in, hold the power button for 3 seconds to turn on.
- 3) The vibrator will greet you by lighting the LED and starting its first vibration.
- 4) Subsequent short presses of the button change the different modes of vibration and pulsation.
- 5) Turn it off by long pressing the power button again for 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two C batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.