

# MASTURBATOR NMC NITE RIDER VIBRATING



## User manual

### CONTROL

- 1) At the bottom of the masturbator is a cover for inserting the vibrating cartridge.  
(See pictorial instructions on the other side of the manual).
- 2) Insert 3 AA batteries into the remote control and connect the remote control to the vibrating cartridge with the included cable.
- 3) Turn on the vibration by moving the switch on the remote control from OFF to LOW - the lowest vibration position, MID - medium vibration or HI - highest vibration.
- 4) To turn the vibrating cartridge off, slide the switch to the OFF position.

### MAINTENANCE

First, remove the sleeve from the masturbator and clean it with lukewarm water. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The masturbator **is not waterproof or water resistant!**

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING


The masturbator is powered by three AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Masturbator.

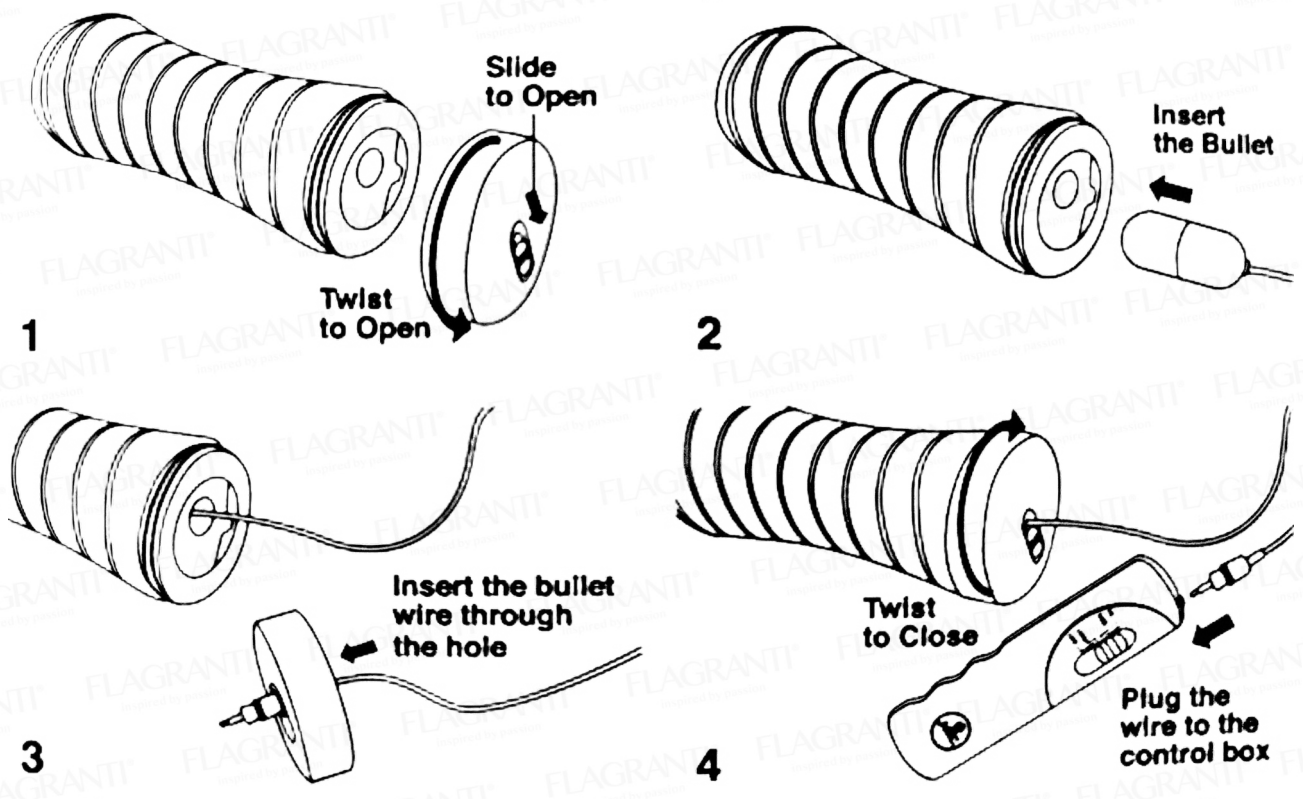

**Trinet Corp., s.r.o.**

Provozní 5560/1b  
722 00 Ostrava - Třebovice, Czech Republic

**Potřebujete poradit?**

Napište nám na [flagranti@flagranti.cz](mailto:flagranti@flagranti.cz)  
nebo zavolejte na tel.: +420 774 082 678