

BANGERS

BY HIDDEN DESIRE



INSTRUCTION MANUAL

Congratulations on the purchase of your Hidden Desire sex toy! To increase the fun you will have with this toy and to ensure proper and safe handling, please read these instructions carefully.

Fun with Hidden Desire!

Hidden Desire's award winning sex products provide that extra oomph to your sex life, regardless, if you are alone, with your significant other, or part of a group of love-enthusiasts. Life is short, and Hidden Desire helps you collect many memorable moments along the way.

SECURITY ADVICE FOR BATTERY-OPERATED TOYS

- **Warning!** Should you come into contact with battery acid, wash the affected area thoroughly with water. If the battery acid get into your eyes, flush them out with water and seek immediate medical attention.
- **Caution!** Never throw the batteries into fire or water. This can cause an explosion.
- Only use batteries recommended by the manufacturer.
- Never try to recharge non rechargeable batteries.
- Never expose the batteries to water or rain.
- Never use different kinds of batteries together.
- Never short-circuit the batteries.
- Always insert the batteries correctly according to the polarity markings.
- Never put the sex toy into water or other liquids, unless otherwise expressly stated on the packaging and/or product description.



Exhausted batteries must be recycled or disposed of in an environmentally approved manner. Do not dispose of exhausted batteries in your regular household waste.

TIPS FOR USING YOUR SEX TOY

There is no right or wrong when using a sex toy. Just do what feels good. The following points are just some basic advice that should help to make your experience more pleasurable and comfortable and to reduce all risks connected to the use of sex toys.

Check it:

- Always check your sex toy carefully before using it. Do not use it, if you find any defects like broken material, or scratched or sharp surfaces.
- Should you not feel comfortable or experience pain, stop using the sex toy.
- Do not use sex toys on swollen or recently injured areas.
- Sex toys should not be used by pregnant or menstruating women, or persons who are ill. Consult a doctor first.

Cover it:

- Always use a condom together with your sex toy (cover the toy or your penis). It will reduce the chance of you having an allergic reaction to the sex toy material and makes cleaning easier.
- It is especially important to use a condom if you plan on sharing your sex toy. Make sure to use a new condom for each person.
- If you currently have a sexually transmitted infection you should also use a condom on your sex toy as it is possible for you to re-infect yourself.

Grease it:

- Always use a lubricant when using your sex toy. For vibrators, woman's natural juices, no matter how much they may be, don't provide enough lubrication. The anus doesn't lubricate itself at all, so make sure to use lots of lubricant.
- With this sex toy we recommend to use water-based lubricants.
- Never use:
 - oil based lubricants with latex/rubber sex toys,
 - silicone based lubricants with silicone sex toys as they can disintegrate the surface.

CLEANING YOUR SEX TOY

- Prior to first use and after each use clean your sex toy.
- If the sex toy contains batteries, remove them before cleaning it.
- Wash your sex toy using a Toy Cleaner and dry with a lint-free cloth or towel. For cleaning details refer to the product packaging of the cleaning agent.
- Avoid submerging the sex toy into water, unless otherwise expressly stated on the packaging and/or product description.
- Make sure no water gets into the battery compartment.
- Take extra care when cleaning porous sex toys as pores can trap bacteria and viruses.
- Never use abrasive agents or cleaning detergents containing alcohol, petrol or acetone.
- Let your sex toy dry completely before re-inserting the batteries and before next use.

STORAGE OF YOUR SEX TOY

- If the sex toy contains batteries, remove them when the toy is not to be used for an extended period of time.
- Avoid leaving your sex toy in direct sunlight and never expose it to extreme heat.
- Store your sex toy in a dry, dust-free place at room temperature. Keep it away from toys of other materials.
- Do not let children play with the sex toy.

ENVIRONMENTAL PROTECTION



Please dispose of packaging materials properly and do not let children play with it.

DISPOSAL OF OLD ELECTRONIC EQUIPMENT



The crossed-out dustbin symbol indicates that your sex toy shall not be treated as household waste, but be handed over to the applicable collection points for recycling of electrical and electronic equipment. By ensuring your sex toy is disposed of correctly, you will help protecting the environment and human health. The recycling of materials will further help conserve natural resources. For more information about the recycling of your sex toy, please contact