

ANAL PLUG PIPEDREAM ICICLES NO. 83

User manual



CONTROL

- 1) Hold the button for at least 3 seconds to turn on the vibrator.
- 2) Short presses to switch between each vibration.
- 3) Long press to switch it off.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an erotic cleaner, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only water-based lubricants. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The wristband (remote control) is charged with the same cable as the vibrator.

The remote control is also powered by an integrated battery and charging is done with the same cable as for the plug.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Trinet Corp., s.r.o.

In the package you will find an anal plug, a remote control and a USB cable for charging.