

GOLDEN BOMB VIBRATOR



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Remove the battery cover, insert 2 Type C UM2 batteries (included) and screw the cover back on.
- 3) The bottom cover has a built-in rotary wheel to turn the vibrator on and continuously control the vibration.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base.**

DRIVE AND CHARGING

The vibrator is powered by two C UM 2 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator and two Type C UM2 batteries.