

PIPEDREAM FFS PANTIES HANKY SPANK ME VIBRATING PANTIES (VIBRATOR)



User manual

CONTROL

- 1) Unscrew the cartridge and remove the battery lock.
- 2) Once screwed in, just press the button to turn the vibration on or off.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy. The vibrator can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Due to the material of the vibrator, you can use [lubricants of any base](#).

DRIVE AND CHARGING

The vibrator is powered by three LR44 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator with LR44 batteries and three spare LR44 batteries.