

VIBRATOR BLUSH JET MIDNIGHT CARBON

User manual



CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert 2 AA batteries (not included) and screw the cover back on.
- 3) The vibrator will start vibrating automatically, that is, if you want to turn it off, you must also remove the batteries.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an erotic cleaner, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is waterproof, so maintenance is very easy. Waterproof means that splashing water will fall on it, but you **MUST NOT** submerge it in water! You could only immerse the product in water if it was waterproof.

LUBRICATION

Due to the material of the vibrator, you can use lubricants of any base.

DRIVE AND CHARGING

The vibrator is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.