

MASSAGE HEAD AND VIBRATOR 2IN1 BLUSH LUSH GIA

User manual



CONTROL

- 1) Long press each button to turn the vibrator on and short presses to switch between vibration modes.
- 2) Each button controls its own end of the vibrator.
- 3) Turn it off with another long press.
- 4) Charge it for 2-3 hours before first use.
- 5) After charging, it will last you about 50 minutes of operation.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is water resistant, so maintenance is very easy. Water resistant means that splashing water will fall on it, but you **MUST NOT** submerge it in water! You could only immerse the product in water if it was waterproof.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator and magnetic USB cable for charging.