

# VIBRATING NIPPLE CLAMPS



## User manual

### CONTROL

- 1) Place two AA batteries in the controller according to the marked poles.
- 2) To turn the scribers on/off, briefly press the ON/OFF button.
- 3) Change the vibration rhythms with short presses of the MODE button.

### MAINTENANCE

After each use, use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The tools are **not waterproof or waterproof!**

### DRIVE AND CHARGING

The control unit (driver) is powered by two AA batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Remote control (control unit), 2x cable for connection to the clamp, 2x nipple clamp.