

VIBRATOR VIBE THERAPY INCANTATION



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert 2 AAA batteries (not included) and screw the cover back on.
- 3) There is a power button (with the "power" symbol) on the handle.
- 4) Short presses of the button with the wave symbol change the individual vibration rhythms.
- 5) To switch off the vibrator, hold down the "power" button for approx. 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

The vibrator can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the **water resistance** of the product, this **is not possible** in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two AAA batteries.

For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.