

JELLY ANAL VIBRATOR

User manual



CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert the AA battery (not included) and screw the cover back on.
- 3) Turn the vibrator on and off by briefly pressing the button on the bottom.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by AA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.