

STIMULATOR SWEET SMILE PANTY

User manual



CONTROL

- 1) Hold the button on the base of the stimulator for 3 seconds to turn on. It will greet you with a backlit button, putting it into standby mode.
- 2) Subsequent short presses turn on and change the vibration and pulsation modes.
- 3) Turn it off by long pressing the button again for 3 seconds.
- 4) If using the remote control, place the stimulator in standby mode.
- 5) Hold the button on the remote for 3 seconds to turn on the vibrations and short presses to change them.
- 6) Hold again to pause the vibration and you can repeat the process again at will.
- 7) You must then turn the stimulator off again at its base.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently. The remote control is powered by CR 2032 battery.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a clitoral stimulator, remote control, USB charging cable and a CR 2032 battery.