

INSERT CHARGER through 6 functions of the remote to cycle through 6 functions of thumping at the head of the shaft, Press the Function at the head of the shaft, Press the Power Button on the remote for 1.5 seconds to turn off all functions in the toy and return to standby mode. Turn the toy off completely by using the Power Button at the base of the toy.

USB RECHARGEABLE