

PRINTS CHARMING BUZZED 5" MINI VIBRATOR



User manual

CONTROL

- 1) Unscrew the cap and insert the batteries according to the marked poles.
- 2) Screw the cap back on firmly one way.
- 3) Hold the button for 3 seconds to turn it on.
- 4) Briefly press the button to change the different vibration and pulsation modes.
- 5) Turn it off by holding the button down again for 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

DRIVE AND CHARGING

The vibrator is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator and velvet bag.