

# MASSAGE HEAD YEQU AV WAND HEAD BIG VIBRATING

## User manual



### CONTROL

- 1) Hold the middle power button for 2 seconds to turn on. The vibrator will greet you with an LED light and a short vibration.
- 2) Subsequent short presses of the middle button will turn on and change the vibration and pulsation modes.
- 3) Press the + button briefly to increase the intensity, conversely press the - button briefly for a softer vibration.
- 4) To turn it off, long press the power button again for 2 seconds.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator **is not waterproof or water resistant!**

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a vibrator and magnetic USB cable for charging.