

VIBRÁTOR YEQU ANNA

User manual



CONTROL

- 1) Hold the middle button 0 for 2 seconds to turn on.
The vibrator will greet you by lighting up the LED.
- 2) Subsequent short presses of the top button with the + or - symbol will turn on and change the vibration and pulsation modes. Always use the plus button to add a vibration level and the minus button to go back a level.
- 3) To turn it off, long press the 0 button again for 2 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.
You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.
The vibrator can be splashed with water, but you **MUST NOT immerse it in water!**
Waterproof means that you could completely submerge the product in water and enjoy water play.
Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and USB cable for charging.