

YEQU MASSAGE HEAD ANNA HEAD WAND VIBRATING



User manual

CONTROL

- 1) Hold the bottom power button for 2 seconds to turn on. The vibrator will greet you by lighting up the LED.
- 2) Subsequent short presses of the top button with the + symbol will turn on and change the vibration and pulsation modes.
- 3) Each press moves you up one level, a short press of the power button takes you back one level.
- 4) To turn it off, long press the power button again for 2 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy. The vibrator can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due **only to the water resistance** of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator and USB cable for charging.