

CLEANSTREAM KLYSMA VIBRATING INTIMATE SHOWER



User manual

CONTROL

- 1) There is a screw at the end of the shower head and you will also find a screw-on enema attachment in the package to use to connect not only to regular shower hoses, but also to most anal cleansing systems.
- 2) You can easily turn on the vibration mode when cleansing, you will find the button on the side at the bottom.
- 3) Long press to turn the vibration on and off, short presses to switch between the different styles.

MAINTENANCE

After each use, rinse the shower with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The shower is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The shower is powered by an integrated Li-ion battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find an anal shower and a USB cable for charging.