

BAD GIRL VIBRATING ASS MASTURBATOR



User manual

CONTROL

- 1) There is a hole in the front of the masturbator to accommodate the vibrating egg.
- 2) Insert two AA batteries into the remote control.
- 3) After placing the egg in the hole, turn on the vibration by turning the dial on the side of the remote, which also serves as a stepless vibration control.

MAINTENANCE

After each use, rinse the masturbator with lukewarm water and soapy detergent.

ATTENTION! Always remove the vibrating egg before maintenance of the masturbator!

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrating egg is **not waterproof or water resistant!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrating egg is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Masturbator and vibrating egg with remote control.