

# ANAL PLUG CALEXOTICS BOOTY CALL BOOTY DOUBLE DARE



## User manual

### CONTROL

- 1) Insert two AAA batteries into the controller.
- 2) To turn on the vibration, turn the dial from the starting position.
- 3) The intensity is then controlled with the same dial.
- 4) To turn the vibration off, turn the dial to the starting position.

### MAINTENANCE

After each use, rinse the plug with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The egg is **not waterproof or water resistant!** Plug is **waterproof!**

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Anal plug with vibrating egg and remote control.