

NECKLACE WITH VIBRATOR CRAVE - VESPER 2



User manual

CONTROL

- 1) Screw on the cap fully. If the cap is not tightened or is missing, the vibrator will be momentarily vibrate rhythmically for a moment, but will not start.
- 2) Briefly press the button on the body of the vibrator to start the first vibration mode.
- 3) Additional short presses of the button change the individual rhythms.
- 4) Hold the button for 2 seconds to turn it off.

ATTENTION! Use only to stimulate the clitoris or nipples, not the vagina or anus!

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Due to the material of the product, you can use **lubricants of any base**.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a necklace with a vibrator and a USB cable for charging.