

VIBRATOR ANNE'S DESIRE DUAL PLEASURE WIRELESS TECHNOLOGY WATCHME

Instructions for use

1. Hold the "power" button on the vibrator for 2 seconds
2. The LEDs will light up and the vibrator will enter standby mode
3. Subsequent short presses of the button switch on and change the vibration and pulsation modes
4. Turn it off by long pressing the "power" button again for 2 seconds
5. To use with the remote control, place the vibrator in standby mode
6. Then press the middle button on the watch with the wheel symbol for 3 seconds to start the vibration
7. Short presses to change the different modes
8. Short presses of the arrow buttons adjust the intensity of the vibration
9. Hold down the wheel button for 2 seconds to pause the vibration
10. To switch off the vibrator, press the button on the body of the vibrator.

Maintenance

Wash the vibrator with water and antibacterial soap. For a more thorough cleaning, use a cleaner designed for silicone erotic toys.

The vibrator is waterproof, so maintenance is very easy.

Storage

Store separately from other erotic toys in a dry and dark place.

Lubrication

Use only water-based lubricants. Other lubricating gels could damage the surface of the toy!

Power supply

The vibrator is powered by one integrated Li-on battery, just like the bracelet

Package contents

Vibrator, wristband, charging cable

FLAGGRANTI®