

# FAIRYGASM THRILLEAF STIMULATOR



## User manual

### CONTROL

- 1) Press and hold the button for 2 seconds to turn the unit on and off.
- 2) Press briefly to switch between vibration modes.

### MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a stimulator and USB cable for charging.