

# MASSAGE HEAD AND VIBRATOR 2IN1 MELO D099



## User manual

### CONTROL

- 1) Hold the top button on the handle for 2 seconds.  
The first vibration mode of the massage head will start and the LEDs will light up.
- 2) Subsequent short presses of this button change the individual rhythms of vibration and pulsation.
- 3) A short press of the bottom button switches the vibrations to the vibrator handle.
- 4) Repeated short presses of the bottom button change the vibration modes.
- 5) Turn it off by holding the top button long again for 2 seconds.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.  
You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.  
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.  
The vibrator can be splashed with water, but you **MUST NOT immerse it in water!**  
Waterproof means that you could completely submerge the product in water and enjoy water play.  
Due only to the water resistance of the product, this is not possible in this case.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.  
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator and magnetic USB cable for charging.