

MASTURBATOR MELO CUP L1314

User manual



CONTROL

- 1) Turn it on by holding the button on the base for 2 seconds.
- 2) Short presses of the button change the vibration and pulsation modes individually.
- 3) Turn it off by holding the button again for 2 seconds.
- 4) Switch the cartridge on, unscrew the masturbator cap (reverse thread - turn to the right) and release the retaining ring (also turn to the right).
- 5) Pull the sleeve out of the packaging and insert the turned on cartridge into the prepared chamber.
- 6) Then replace the sleeve and screw the retaining ring back on.

MAINTENANCE

After each use, rinse the masturbator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The masturbator is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The masturbator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Masturbator and USB cable for charging.