

# PROSTATE STIMULATOR MELO M1241

## User manual



### CONTROL

- 1) Hold the power button on the base for 2 seconds to turn on. The stimulator will enter standby mode, greeting you with a lit LED and a short vibration.
- 2) Subsequent short presses of the button will turn on and change the vibration and pulsation modes.
- 3) To turn it off, long press the power button again for 2 seconds.
- 4) For use with the remote control, place the stimulator in standby mode.
- 5) Short press the button on the remote to turn on the vibration.
- 6) Repeated short presses change the individual vibration rhythms.
- 7) To pause the vibration, hold the button for 2 seconds.
- 8) Then you must turn it off with its own button.

### MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The stimulator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play. The driver is also waterproof.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The remote is also powered by an internal battery and you charge it with the same cable as the stimulator.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a prostate stimulator, a remote control and a USB cable for charging.