

# VIBRATING EGG MELO M1242

## User manual



### CONTROL

- 1) Hold the top power button for 2 seconds to turn on. The vibrator will greet you by lighting up the LED.
- 2) Subsequent short presses of the bottom button with the wave symbol will turn on and change vibration modes and pulsations.
- 3) Turn it off by long pressing the power button again for 2 seconds.

### MAINTENANCE

After each use, rinse the egg with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The egg is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The remote control is powered by a disposable integrated battery.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a vibrating egg, a remote control and a USB cable for charging.