

VIBRATING EGG PICOBONG HONI 2



User manual

CONTROL

- 1) Unscrew the shaft and insert the battery with the plus pole facing out
- 2) After screwing it back in, you will find two buttons in the PicoBong brand relief
- 3) In the letter P you will find the - button and in the letter B you will find the + button
- 4) Hold the + button for 1 second to start the first vibration mode
- 5) Hold down the + button to increase the vibration intensity, hold down the - button to decrease it
- 6) To change the rhythm, hold down the + button to reach the highest level of intensity
- 7) Then hold the + button for 3 seconds and the egg will change the rhythm of the pulsation
- 8) Now you just need to change the modes with short presses
- 9) To turn the egg off, reverse the process, i.e. hold the - button for 3 seconds, which puts it into first vibration mode, and hold the - button again, which reduces the intensity of the vibration until it turns off

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by AAA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrating egg.