

User Instructions

Press & hold power button on bullet for 3 seconds to power on/off.

Press repeatedly to cycle through 7 patterns of vibration.

Thin wave button:
Press to return to
steady vibration.

Power button:
Press to start/stop vibration



Plus button:
Press to cycle up through
4 vibration speeds.

Thick wave button:
Press to cycle through
7 modes of vibration.

Minus button:
Press to cycle down
through 4 vibration
speeds.

*Bullet must be powered
on separately. Remove
plastic tab from remote
battery before use.

Care instructions

Use with water-based lubricant.

Wash after each use with warm water and toy cleaner. Air or pat dry and store in a cool, dry location, away from direct sunlight and separated from other toys.

Charging

Insert jackpin into dimple at base of bullet and connect to USB port or adapter. Power button will flash while charging. Remove from charger promptly once fully charged.

Product Information

Material:	Silicone, ABS plastic	Battery type:	Lithium
Charging time:	1 Hour	Voltage:	3.7V
Run time:	45 mins	Waterproof:	IPX5
Functions:	4 speeds + 7 patterns of vibration	Remote distance:	32 ft
		Remote battery:	1xCR2032 (included)