

NS NOVELTIES LUST-N-DREAMS SALSA MASSAGE WAND



User manual

CONTROL

- 1) Press the lower “power” button for about 3 seconds to turn the head on.
- 2) By successive short presses of the upper button with the “wave” symbol, you change the individual vibration and pulsation rhythms.
- 3) Press the “power” button briefly to turn the head off.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.

The product can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

Charging time is about 90 minutes.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a massage wand and a USB charging cable.

Trinet Corp., s.r.o.

Provozní 5560/1b

722 00 Ostrava – Třebovice, Czech Republic

Potřebujete poradit?

Napište nám na flagranti@flagranti.cz
nebo zavolejte na tel.: +420 774 082 678