

plusOne / Walmart/ CVS
 6747 Rose Arouser Instruction Manual
 230329
 Print Production
 5x3" Card

All colors are CMYK

- Uncoated Cardstock
- Bleed
- Double sided
- Tri-fold

= Indicates fold

Back

Front

plusOne®

rose arouser

cleaning:

Clean thoroughly with mild soap and warm water, before and after each use.

storage:

Store in a cool dry place separately from other sexual wellness devices; sexual wellness devices of different material can damage each other if left in contact.

quality:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex.

special instructions:

Do not turn on while charging and/or cleaning. (While charging the light will flash; the light will turn solid when fully charged) **Low battery alert:** Light will flash rapidly when battery is running low. Use only with 5-volt USB wall adapter (standard mobile phone charger). Allow 120 minutes for a full charge. Use water based lubricant only.

warnings:

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging.

for complete user manual & more information on ways to use your new rose arouser:

visit myplusOne.com

or follow us: [@_myplusOne](https://www.instagram.com/_myplusOne)

DON'T MISS
 YOUR EXCLUSIVE
 WELCOME OFFER



scan to
 learn more

unlock on myplusOne.com
 when you sign up via email to
 receive news and promotions

love your purchase? let us know!



plusOne®

rose arouser



 
instruction manual

Outside

product overview

power button:

Press and hold the power button for 3 seconds to turn on. Press firmly to cycle through the 10 settings. Press and hold for 3 seconds to power off.

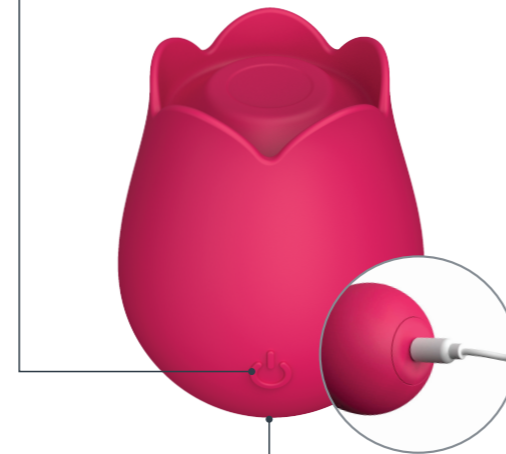


charging port:

Attach the magnetic charging head to the charging contact.


The battery shall be disposed in accordance with the local laws and regulations. If possible, please recycle it. Users shall not take out or replace the battery by themselves; doing so may damage the product.

INCLUDES: rose arouser, charging cable, and instruction manual

 
how to charge

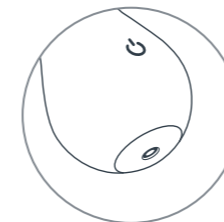

 1. The charging contact is a small metal circle located on the bottom of the device.

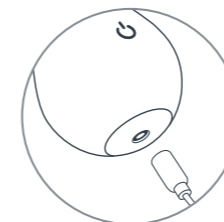


 2. Line up the magnetic charging head with the charging contact.

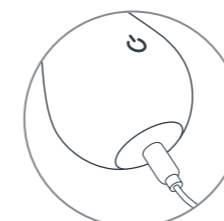


3. The cable will magnetically attach itself into place. The power button LED light will pulsate slowly to indicate charging.

 ways to use

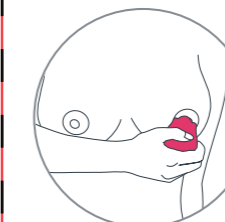


warming up?

 Use the rose arouser to caress your or your partners' breasts, focusing on the nipples, to slowly increase arousal.

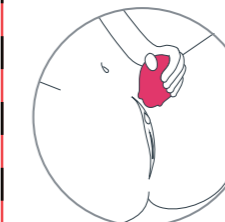

explore the sensations

 Press the pulsing head directly on, or near, the clitoris for heightened external stimulation. Explore by brushing the arouser's vibrating petals directly against, or near, your vulva.

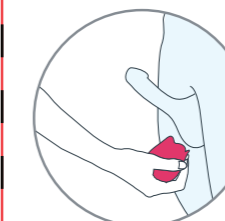

switch things up

Reverse the rose arouser on your partner to get them in the mood. Explore each of the 10 pulsing pleasure settings for teasing and eventually, reaching euphoric climax.

Inside