

SECRET PLAY SENSUAL FEELINGS SET



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Remove the battery cover, insert the AAA battery (included) and screw the cover back on.
- 3) Turn the vibrator on and off by pressing the button on the battery cover.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **not waterproof or water resistant!**

LUBRICATION

Due to the material of the product, you can use [lubricants of any base](#).

DRIVE AND CHARGING

The product is powered by two AAA battery.

For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator and AAA battery.