

VIBRATOR STRAP U G-PULSE STRAPLESS

User manual



CONTROL

- 1) Hold down the top power button for 3 seconds to put it into standby mode. The vibrator will greet you with a flashing LED.
- 2) Short presses of this button change the vibration rhythms of the penetration arm.
- 3) Longer presses on the middle button turn on the clitoral stimulator and shorter presses change the pulsation modes of the ball.
- 4) Longer presses of the same button turn the function off.
- 5) Hold the bottom button to bring the vaginal part of the strap-on to life.
- 6) Short presses of the button control the inflation function, repeated longer presses of the same button are used to turn off the program.
- 7) All three functions can be enjoyed simultaneously or by using the specific button dedicated to the type of stimulation to turn off a specific part.
- 8) Long pressing and holding the power button for 3 seconds will reliably turn off all mods of the product.
- 9) The inflatable part automatically releases the sucked air.
- 10) For use with the remote control, turn the vibrator to standby mode and long press the power button on the remote to start the vibration of the penetration arm.
- 11) You are greeted by its first vibration and repeated short presses change its rhythms and a longer hold on the same button turns the mode off.
- 12) Use the bottom button on the controller to similarly control the clitoral stimulator.
- 13) Longer presses of the left button on the controller bring the shorter arm to life, shorter presses of this button gradually inflate the shorter vaginal part to the desired size.
- 14) A longer press of the right button on the controller will deflate the air and turn this function off.
- 15) All three functions can be enjoyed simultaneously or by using the specific button dedicated to that type of stimulation to turn off a specific part.
- 16) Long press and hold the power button on the controller for 3 seconds to reliably switch off all the product programs.
- 17) The vibrator must then always be switched off with its own power button on the body of the base.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

The stimulator can be splashed with water, but you **MUST NOT** immerse it in water!

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the **water resistance** of the product, this **is not possible** in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

The remote control is powered by two AAA batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator, remote control and USB cable for charging.