

VIBRATOR STRAP U U-PULSE STRAPLESS

User manual



CONTROL

- 1) Hold the middle power button for 3 seconds to put the strap-on into standby mode. The vibrator will greet you by lighting up the LED.
- 2) Short presses of this button change the vibration and pulsation rhythms of the protrusion for clitoral stimulation.
- 3) Hold it longer to turn the vibrator off.
- 4) When the power button is lit, you can start controlling both arms of the strap-on.
- 5) Long press the top button to start the vibration of the longer arm, and short press it to change modes.
- 6) Press this button again for 3 seconds to turn the arm off.
- 7) A longer press of the bottom button then turns on and shorter presses change the rotation of the ball in the shorter part vibrator, repeated longer presses are used to turn this program off.
- 8) All three functions can be enjoyed simultaneously or by using the specific button dedicated to that type of stimulation to turn off a specific part.
- 9) Long pressing and holding the power button for 3 seconds will reliably turn off all mods of the product.
- 10) For use with the remote control, put the vibrator on standby and briefly press the power button on the remote.
- 11) Holding the top button with the ripple symbol on the remote for 3 seconds will turn on the penetration arm and pressing it shorter will cycle through the programs.
- 12) Longer presses of the same button will turn the vibration off.
- 13) Use the bottom button with two brackets to control the clitoral stimulator in a similar way.
- 14) The right button marked with a bracket wakes the shorter arm to life by pressing it for 3 seconds, short presses change the modes of rotation of the ball.
- 15) Longer presses on the button with the reversed bracket found on the left side, then the motor of this part to switch off.
- 16) All three functions can be enjoyed simultaneously or by using the specific button dedicated to that type of stimulation to turn off a specific part.
- 17) Long press and hold the power button on the controller for 3 seconds to reliably turn off all the product programs.
- 18) The vibrator must then always be switched off with its own power button on the body of the base.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

The stimulator can be splashed with water, but you **MUST NOT** immerse it in water!

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the **water resistance** of the product, this **is not possible** in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

The remote control is powered by CR 2032 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator, remote control and USB cable for charging.