

# WOODOO TOUCH KARYA VIBRATOR



## User manual

### CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert one AA battery (not included) and screw the cover back on.
- 3) Turn the vibrator on by turning the wheel on the battery cover and gradually rotate to regulate the strength of the vibration.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.  
You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.  
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **not waterproof or water resistant!**

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by one AA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.