

VIBRATING BALLS Y.LOVE APRIL

User manual



CONTROL

- 1) Hold the power button for 2 seconds and the gadget will greet you by lighting up the LED and switching to standby mode.
- 2) Subsequent short presses of the button turn on and change the individual rhythms of vibration and pulsation.
- 3) Turn it off by holding the power button long again for 2 seconds.
- 4) For use with the remote control, place the balls in standby mode.
- 5) The remote does not switch on the beads in any way, so short presses immediately switch on and change their vibration rhythms.
- 6) Hold the button on the remote for 2 seconds to pause the vibration.
- 7) You then have to turn the balls off with their own button.

MAINTENANCE

After each use, rinse the balls with lukewarm water and soapy detergent.
You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The balls are **water resistant**, so maintenance is very easy.
Splashing water may fall on the balls, **but you MUST NOT immerse them in water!**
Waterproof means that you could completely submerge the product in water and enjoy water play.
Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The balls is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The remote control is powered by a CR 2032 battery.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find vibrating balls, remote control and USB cable for charging.