

# User manual

## Before use

Charge the vibrator completely before first use with the included USB cable. Plug the pin at the end of the charging cable into the charging point at the back of the vibrator. Connect the cable to a USB port. When the battery is charging, the LED light blinks. When the light stops blinking and burns constantly, the battery is completely charged.

## Turning on and off

Hold the power button at the bottom for 3 seconds to turn on the toy. The LED light will turn on. If this is not the case, the battery is empty. Charge the battery first and then try again. After use, hold the push button for 3 seconds to turn off the toy.

## Operating

Scroll through the 10 different vibration settings with the power button. Press the button to go to the next setting. There are 3 vibration speeds and 7 vibration patterns in total. After the last setting, the vibrator starts again at the beginning.

## Lubricant

The vibrator is made of silicone. Therefore it can only be used in combination with water-based lubricant. Other lubricants can negatively affect the material, allowing bacteria to grow and making it impossible to hygienically clean the toy.

## Cleaning

Rinse the vibrator with lukewarm water. Apply toy cleaner to the vibrator and thoroughly rub it clean. Repeat this step if necessary. Rinse the vibrator with lukewarm water and lay it down to dry or dab it dry with a lint-free cloth or towel.

## Storage

Safely store the vibrator at a dry and dark place.  
Use a toy bag to protect the toy from dust and scratches.

## Disclaimer

This product is sold as a novelty product only. All rights reserved. To avoid injury or aggravation of pre-existing conditions this product should not be used on bruised, swollen or inflamed areas. Only use the product as instructed. No medical claims are warranted or implied by the use of this product, its use is at your own risk.