Chorus Pro

Online user manual

Innovation Meets Intensity – Feel the Fusion Wave

Chorus Pro is the a powerful couples vibrator, featuring the unique Fusion Wave Technology for deep, rhythmic stimulation. With its innovative Haptic Squeeze Remote and adjustable fit, it offers intuitive control and a truly personalized experience. Designed for those who crave more, it delivers unparalleled pleasure with app connectivity for the ultimate shared intimacy.

Table of contents

1 Chorus Pro overview
2 How to use
3 Cleaning
4 Pair the remote
5 We-Vibe App
6 Fusion Wave Technology

1 Overview

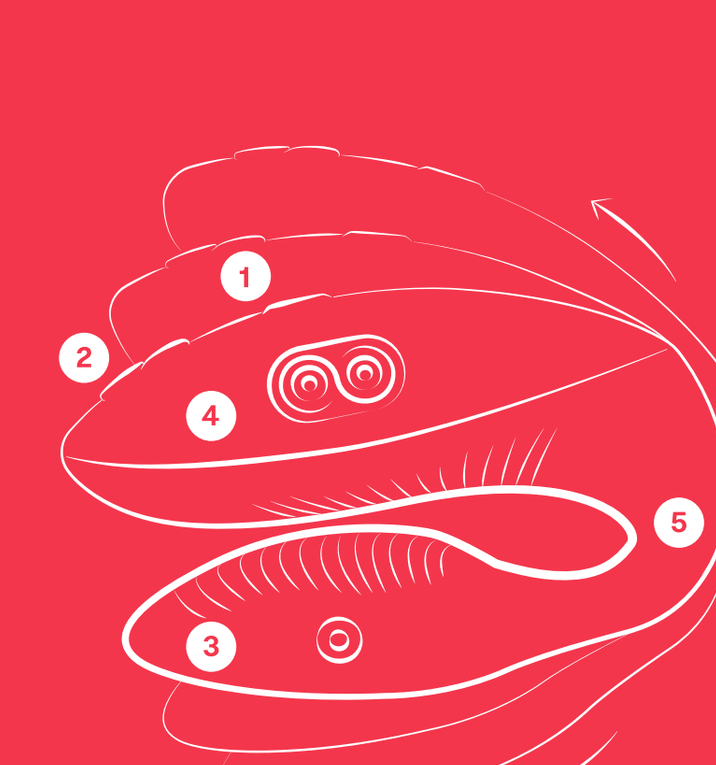

1. Control button
2. Magnetic charging pins
3. Internal stimulator
4. External stimulator
5. Adjustable fit

1. Squeeze remote
2. ⊕ ON / Increase vibration
3. ⊖ OFF / Decrease vibration
4. ‹ › Cycle patterns
5. Squeeze mode
6. Travel vent

2 How to use

Step 1: Get ready

Changes in air pressure during shipping or travel can cause the remote's air chamber to deflate slightly. Before first use, use a ballpoint pen to gently press the travel vent on the remote - this fills the air pocket and ensures it works properly. Then, place both the couples vibrator and the remote into the charging case and fully charge them - so everything's ready when you are.

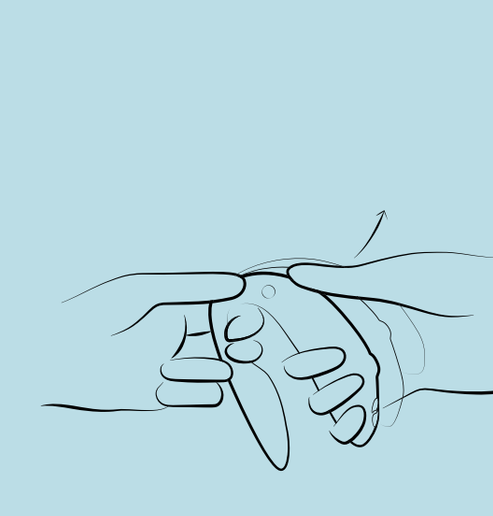

Step 2: Prep & Play

Adjust the toy's shape for the perfect fit and the right amount of pressure where you want it most.

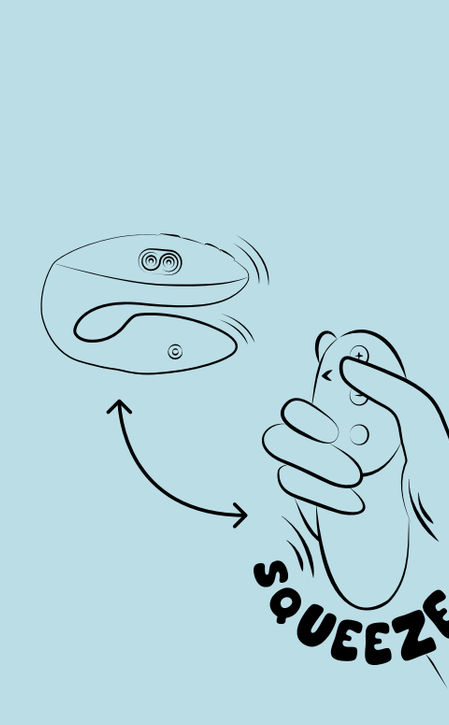

You can take full control of the Chorus Pro with the innovative Haptic Squeeze Remote. Its unique air pocket design makes it super easy to squeeze and instantly intensify the vibrations for totally intuitive control. Or, use the buttons to adjust the intensity and cycle through exciting patterns. It's all about effortless pleasure in your hands.

The remote also provides real-time feedback, vibrating in sync with the toy's intensity. As you squeeze, the remote mirrors the toy's sensations, so you can feel exactly what she feels.

3 Cleaning

Rinse your Chorus Pro and remote with warm water, then add a splash of premium toy cleaner to get started.

4 Pair the remote

Your Chorus Pro and Haptic Squeeze Remote should already be paired and ready to go straight out of the box. To get started, simply press the We-Vibe button on the Chorus Pro once to power it on. Then, hold the Plus button on the remote for 3 seconds to ensure the connection is active

If they don't connect, just reset the Chorus Pro by holding the We-Vibe button for 5 seconds—now it's in pairing mode. After that, press and hold the We-Vibe button on the remote for 5 seconds. Once they connect, you'll feel the toy vibrate 3 times to let you know it's all synced up and ready for fun.

To activate the Squeeze function, just press the We-Vibe button on the remote once, and you're good to go.

5 Pair with the We-Vibe App

Chorus Pro can be controlled from anywhere with the free We-Vibe app. Download it from the App Store or Google Play to get started. To connect your toy, scan the barcode on the bottom of the outer box and follow the on-screen instructions. Once connected, the app lets you customize your experience: control the clitoral and G-spot motors separately, explore different control modes, sync vibrations to the rhythm of your favorite songs, or even let your partner take control from anywhere in the world.

You'll also have access to all 10 vibration patterns, including the exclusive Fusion Wave modes, only available on Chorus Pro.

6 Fusion Wave Technology

Chorus Pro is the only couples vibrator with Fusion Wave Technology — a one-of-a-kind sensation created by two motors in the outer arm. Together, they deliver a wave-like motion that stimulates the clitoris in a deeper, more rhythmic way. It doesn't just vibrate — it pulses and flows, creating a build-up that feels more natural, more intense, and more satisfying.

Chorus Pro offers 10 vibration mode patterns:

1–7 are classic We-Vibe favorites. 8–10 are exclusive Fusion Wave patterns, delivering this unique clitoral sensation.

Fusion Wave Patterns:
8. Echo Wave – Rolling pulses that mimic the rhythm of soft, steady waves.
9. Surge Wave – A playful rhythm with alternating pulses and shifting intensity.
10. Ripple Wave – A rising wave of pleasure that builds and releases in powerful pulses.

7 Touch sense modes

Below the We-Vibe logo, you will find a sensor. With Touch Sense Mode activated, Chorus Pro senses the contact with your partner's body during sex. It adjusts its vibration intensity based on your rhythm, giving you a hands-free, intuitive experience.

Activate Touch Sense Mode in the We-Vibe app, and choose from 3 exciting Touch Sense modes:

TOUCH SENSE MODE 1
When the sensor registers contact, the intensity ramps up to maximum, then drops back to minimum, repeating the cycle for a dynamic, responsive feel.

TOUCH SENSE MODE 2
Chorus Pro keeps a slow wave pattern, but when the sensor detects touch, the intensity increases and stays at that level until contact is lost. If no touch is registered for more than 3 seconds, it returns to the wave pattern.

TOUCH SENSE MODE 3
Chorus Pro vibrates on contact with the sensor, then completely stops when contact ends.

You can set the vibration intensity in the app or with the remote, giving you full control over your experience.

8 Charging

Place both your Chorus Pro and Haptic Squeeze Remote in the charging case to power them up. Enjoy up to 2 hours of play with every charge—a full charge takes just 90 minutes. For optimal storage and to keep them ready for your next session, it's best to store your toy and remote safely in the charging case.

9 Safety instructions

WARNING

Sold as a novelty product only. Not suitable for medical purposes. Only use the product for the intended purpose. Keep out of reach of children. If you are under a physician's care and/or have a condition requiring the use of any medical device, please consult your physician before using this product. Stop using the product immediately if you experience any skin irritations, pain or discomfort and consult your physician.

This product can be used by adults only. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be done by children. Do not use on swollen or inflamed areas of skin.

Remove piercings or jewellery in the genital area before use.

Always clean the product before and after use according to the instructions given in the manual.

To avoid damage to the product, the product and its battery must not be exposed to temperatures above 45°C, be dismantled or mechanically or electrically damaged.

Sharing sex toys may transmit sexual diseases. Do not share your sex toys with users other than your partner. Use protective measures with your partner if necessary. Do not use the toy if you detect any cracks or signs of degredation in the cover material.

This product is not designed for anal use. Do not use anally!

Check the charging device and the product regularly for damage and do not use in any case of damage.

Magnetic fields can influence mechanical and electronic components such as pacemakers. Do not use the product directly over a pacemaker. Contact your physician for more information.

Keep cards with magnetic stripes (such as credit cards) away from the product, as they may be damaged by the product's magnet.

If your product appears to be functioning abnormally, turn it off and consult the support section on our website.

CHARGING

Before the first use of the charging device, check the local voltage level, since the local mains voltage may not exceed the maximum mains voltage given on the charging device.

The product must only be charged at an appropriate, extra-low voltage corresponding to the marking on the product.Do not use or clean the product while the battery is charging.

Never immerse the charging device or charging cable in water or other fluids.This product contains batteries that are non-replaceable.This product contains a rechargeable Li-ion battery.

Disconnect the charging cable from the electrical supply each time after the product has been charged.Do not disassemble, puncture, modify, drop, throw or cause other unnecessary shocks to the batteries.

Do not charge non-rechargeable batteries.

Do not put batteries in your mouth. If swallowed, contact your local physician immediately.

Use only CR2302 battery.Do not use batteries, or charge rechargeable batteries, that appear to be leaking, discoloured, rusty, deformed, emit an odour or are otherwise abnormal.

FOR OPTIMAL USE OF THE PRODUCT, PLEASE FOLLOW THE FOLLOWING GUIDELINES:

To guarantee a long battery life, please charge the product regularly, even if not in use.

Store in a secure, dry place without exposure to direct sunlight.

We recommend using a water-based lubricant with your product. To prevent damage to the product, do not use perfumed, alcohol-based lubricants, gels or massage oils with the product. Do not use silicone-based lubricants with silicone products.

NOTE ON BATTERIES:

European regulations require that we provide the following information:

Batteries and rechargeable batteries must not be disposed of in household waste. As an end user, you are legally required to return used batteries. Please use official collection facilities such as the collection points provided by public waste management authorities to do so. You can also return used batteries that we carry or have carried as new batteries to us. Please contact us at care@we-vibe.com. To prevent short circuits, the poles of lithium batteries should be taped before returning. For safety reasons, we ask you not to send the batteries to us by mail and refer you to the regulations for sending hazardous goods provided by mail carriers.

If the batteries are permanently installed in the product, please do not try to remove them yourself. This may cause permanent damage to the device. Your obligations as a customer are otherwise regulated by the WEEE Directive and the national implementation law.

Please observe the information in the manual and the safety instructions to prevent waste and littering.

Used batteries contain harmful substances that can damage the environment or your health if they are not stored or disposed of properly. In particular, this applies to the improper handling of lithium batteries. Batteries also contain important raw materials such as iron, zinc, manganese and nickel and can be recycled. Separate collection allows these raw materials to be recycled and prevents negative impacts on the environment and human health from released pollutants.

The sign with the crossed-out waste bin means that you must not dispose of batteries and accumulators with household waste.

If the legal requirements are present, this sign means that the following symbols and their meaning must be used when labeling the batteries:

Hg: Battery contains more than 0.0005 percent mercury by mass

Pb: Battery contains more than 0.004 percent lead by mass

Cd: Battery contains more than 0.002 percent cadmium by mass

NOTES ON THE DISPOSAL OF ELECTRICAL EQUIPMENT

European regulations require that we provide the following information:

We would like to point out to owners of electrical equipment that old electrical equipment must be collected separately from municipal waste in accordance with applicable legal regulations. Batteries and accumulators that are not firmly encased in the old electrical equipment, as well as bulbs that can be removed from the equipment without being destroyed, must be separated from the old equipment in a non-destructive way before being given to a collection point for proper disposal. Please refer to the separate instructions for the disposal of batteries. The symbol of a crossed-out waste bin shown below and affixed to old electrical equipment also indicates that the equipment must be collected separately:

According to the WEEE Directive and the national implementation law, as distributors of electrical equipment, we are required to take back certain waste electrical equipment free of charge.

When you purchase a new electrical and electronic device, you can surrender an old electrical device that essentially performs the same functions as the new device to us free of charge. If your old electrical equipment is not larger than 25 centimeters in any dimension, you can also surrender it to us free of charge without purchasing a new device. Please contact us at care@we-vibe.com. We will then arrange the return of the old electrical equipment. For safety reasons, we would like to ask you to refrain from shipping lighting equipment (such as bulbs). Please use the collection points provided by public waste management authorities to return lighting equipment or contact us directly at the aforementioned e-mail address.

You can also return old electrical equipment to any of the collection points run by the public waste disposal authorities. You are making an important contribution to the reuse, recycling and other recovery of old appliances by sending your old electrical equipment for separate collection in the proper collection groups.

As the end user, you are responsible for deleting personal data from the used electrical equipment before handing it in for disposal.

Please observe the information in the manual and safety instructions to prevent waste, and please check for possible repair options.

Chorus Pro:
FFC ID: ZUESCP2A
IC: 9804A-SCP2A
Model: SCP2A
HVIN: SCP2A
PMN: Chorus Pro
Chorus Pro remote:
FFC ID: ZUERSCP2A
IC: 9804A-RSCP2A
Model: R-SCP2A
HVIN: R-SCP2A
PMN: Chorus Pro Remote

Electrical Rating
Model: Chorus Pro
Model No.: SCP2A
3.7 V 0.5 A: Built-in li-ion rechargeable battery
5 V 0.5 A : When charged using USB Charging device. Use only the provided charging cable. When charging via a USB power source, use a USB-C adapter (not included) with an output that matches the product's rated power. Alternatively, when using the charging base, ensure it's connected to a compatible power source and place the product securely on the base to begin charging.Use USB C adaptor (not included) with power output corresponding to product rating.Use provided cable only.Model: Chorus Pro remote Model No.: R-SCP2A3.7V 0.2A: Built-in rechargeable li-ion battery.5V 0.5A : When charged using USB Charging device. Use only the provided charging cable. When charging via a USB power source, use a USB-C adapter (not included) with an output that matches the product's rated power. Alternatively, when using the charging base, ensure it's connected to a compatible power source and place the product securely on the base to begin charging. Use USB C adaptor (not included) with power output corresponding to product rating. Use provided cable only.
Model: Chorus Pro charge base
Model No.: CHB-SCP1A
5V 0.7A: When charged using USB Charging device.
Use USB C adaptor (not included) with power output corresponding to product rating.Use provided cable only.FCC SDoC (We-Vibe Chorus Pro, SCP2A):Responsible party - U.S. ContactInformation:WOW Tech USA Ltd. 103 Foulk Rd, Ste. 202 Wilmington, DE, USA19803-3742 Attention: President

FCC and IC statements:This device complies with Part 15 of the FCC Rules and Industry Canada license exempt RSSOperation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.This Class B digital apparatus complies with Canadian ICES-003.Cet appareil est conforme à la partie 15 des Règles FCC et aux normes RSS exemptes de licence d'Industry Canada. L'utilisation est soumise aux deux conditions suivantes : (1) Cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles qui pourraient provoquer un fonctionnement non souhaité. Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:· Reorient or relocate the receiving antenna.· Increase the separation between the equipment and receiver.· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.· Consult the dealer or an experienced radio/TV technician for help.The device must not be co-located or operating in conjunction with any other antenna or transmitter. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
The device is compliance with RF field strength limits, users can obtain Canadian information on RF exposure and compliance.Le présent appareil est conforme de ce matériel aux conformités ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité d'acquérir les informations correspondante.

Operation Frequency (MHz); 2400 - 2480

Max RF Output power (dBM); Device - 2.82
Remote; -11.15

RESETTING CHORUS TOY OR REMOTE In the unlikely event that your Chorus or remote becomes unresponsive, for example, due to exposure to strong static electricity, you can perform a manual reset:· Connect the device to the charging cable and ensure it is plugged into a power source.· While connected, press and hold the We●Vibe button for 5 seconds. After resetting, the device should resume normal operation

MANUFACTURER WARRANTY

WOW Tech Europe GmbH offers a voluntary manufacturer warranty for this product which applies in addition to the statutory warranty to which consumers are entitled to towards their seller. Details about the manufacturer warranty can be found on the website www.we-vibe.com.

Designed in Canada.
Pat. wowtech.com/pat

WOW Tech Europe GmbHHermann-Blankenstein-Str. 510249 Berlin, Germany

CUSTOMER CARE
care@we-vibe.comwww.we-vibe.com

Packaging

Manuals

Product

Date of issue: 07/2025