

Thank you for purchasing the **SterToy** portable UV sanitizer.
Read this instruction manual carefully before using the sanitiser for the first time. To ensure the correct use of this product, keep it for future reference.

Security warnings

1. Use the corresponding power adapter, output voltage of the 5V adapter; All 1A output currents can be used, type plug used for mobile phones, when you use it, first connect the DC plug, USB, behind the base and then connect to the mains.
2. Ultraviolet rays can cause skin and eye burns, the lid should remain closed when in use. Avoid direct exposure of the human body to ultraviolet radiation.
3. Children should be prevented from playing with the sanitiser.
4. Ozone causes strong oxidation, do not introduce objects with high ferric content to avoid rusting easily.
5. Ozone is an irritant of the mucosa by inhalation in high doses.
6. Over time there could be a slight change in the color of the item you enter, when exposed to ultraviolet light.
7. After sterilization, disconnect the power plug.
8. Do not put objects with water or other liquids inside the sanitiser.
9. Do not immerse the sanitiser in liquids.
10. To clean the sanitizer, it is sufficient to use a soft cloth slightly dampened.
11. Do not touch the UV lamp.
12. Do not attempt to disassemble or modify any part of the equipment.

Technical data of the product

Product name: Portable sanitizing device

Input: DC 5 V 1 A

Nominal power: 5 W

Automatic sterilization time: 8 minutes.



States of the lamp: 1.- Green light: working, 2.- Fixed red light: on hold, 3.- Red light flashing: lid open.

Environment 0° C to 50°

Operating humidity: 20% - 90%

Certification


Name and functions of the parts of the product

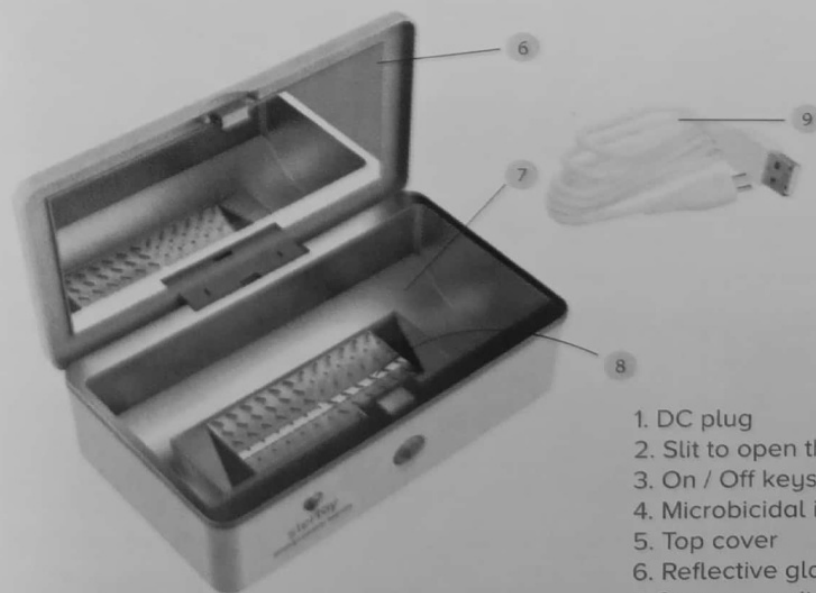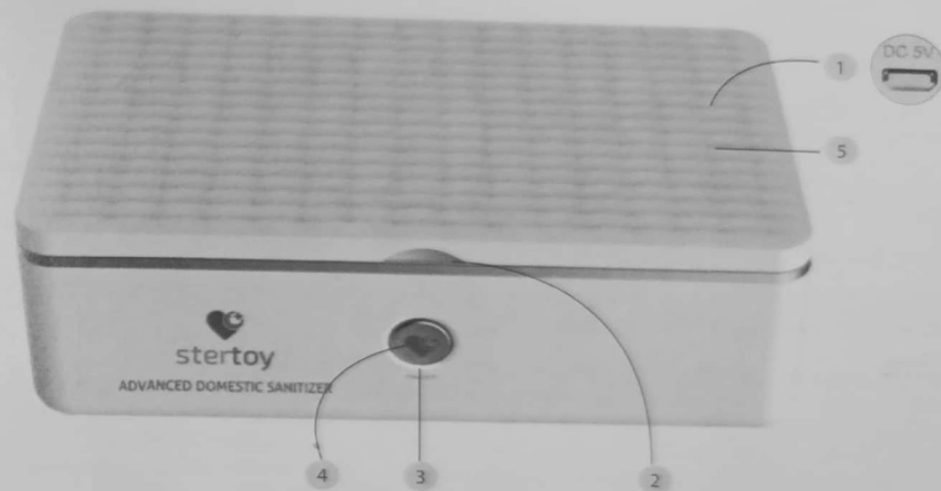

1. DC plug
2. Slit to open the lid
3. On / Off keys
4. Microbicidal indicator lamp
5. Top cover
6. Reflective glass
7. Storage cavity
8. Germicidal lamp
9. USB electricity line

Instructions for use

1. Unpack the sanitiser, connect the USB power line of the appliance with the host's DC plug, and connect it to the mains until the indicator lamp (red) is on.
2. Before placing the items to be disinfected in the sanitiser, they must be free of adhering impurities and be dry.
3. Insert your finger into the indentation to open the lid. The red indicator lamp will begin to flash, insert the object to be disinfected and close the lid.
4. Press the ON / OFF key. When the light turns green, disinfection will begin.
5. The sterilization of ozone and ultraviolet rays will end in 8 minutes. Once completed it will change the light to fixed red.
6. Finished the process the product would be ready to be used.

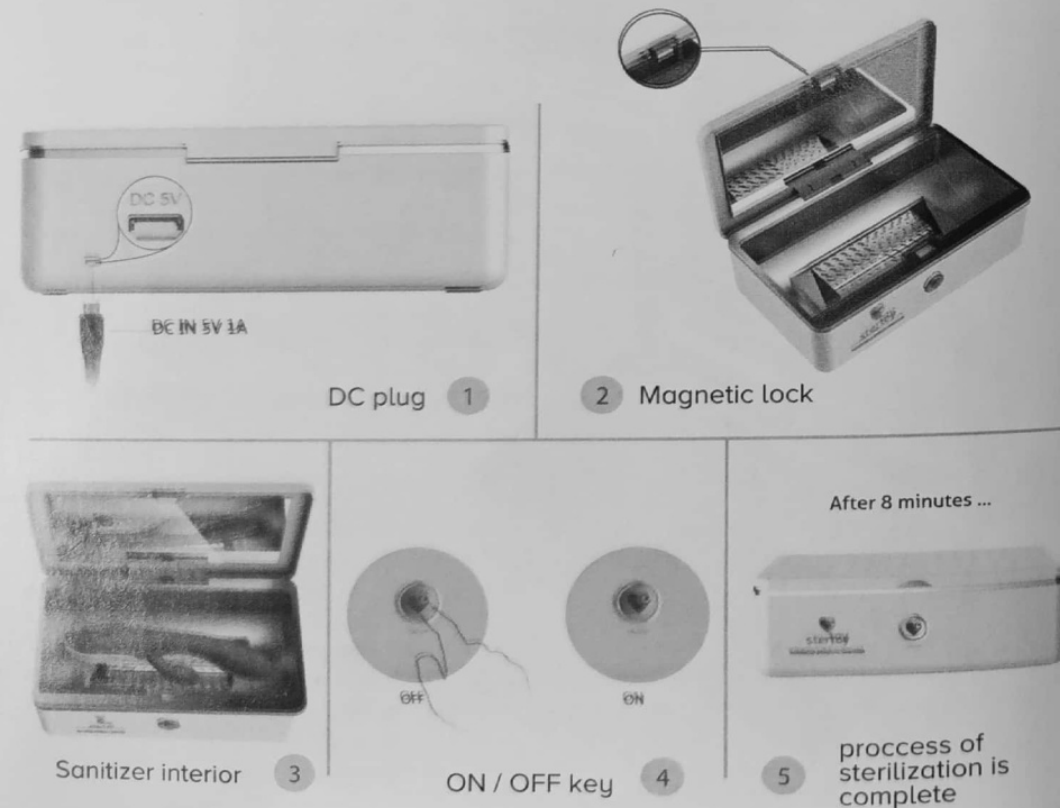

Additional information

1. UV disinfection is a cold process works without adding any chemicals throughout the disinfection process, being a physical system, the microorganisms are not capable of generating resistance to disinfection process. Of bactericidal and germicidal action.
2. Ozone is a great natural disinfectant and a high efficiency antiseptic, generating no chemical residual. Its high oxidizing power eliminates parasites, viruses, bacteria, fungi, molds, spores and many other pollutants almost immediately. Disinfects quickly and effectively.
3. The germicidal UV lamp for disinfection where it acts as a germicide, affecting the molecular structure of the microorganism, sterilizing it and preventing its reproduction.
4. Easy to use. It can be used with a multitude of products and housewares frequently used, you can enter plastic products such as toothbrushes, combs, brush hair, nipples, pacifiers, bottles, manicure items, metal scissors, nail clippers, cutlery, glasses, various herramientras , menstrual cups, intimate toys and a long, etc.
5. The sanitiser is controlled by a microprocessor that automatically controls the sterilization time.
6. Lightweight and easy to transport, perfect to carry on all your trips.

Object of this guarantee

- This equipment has a guarantee of (2) years against any manufacturing defect.
- This guarantee begins from the date of purchase.
- To make use of the guarantee, it is essential to present receipt or purchase invoice of the sanitizer.
- The guarantee will be invalidated if the device is manipulated by people outside the technical service.
- The guarantee will be invalidated by an improper use of the sanitizer.
- To cover the warranty, the product must be sent in its original packaging.
- During the duration of the repair, no amount will be paid, as damages, for the time that the device is out of service.

- This warranty specifically excludes:

- The warranty does not cover damage caused by ignoring the instructions for use and maintenance of the appliance.

- Faults caused to the appliance, due to its non-domestic use, are excluded from the guarantee.

- Periodic inspections, maintenance and repair or replacement of parts due to wear and tear due to normal use of the product.

Customer's information

First name	
Phone Number	
Address complete	
Product name	
Product number (at the base of the device)	
Date of purchase	
Place of purchase	

After-sales service

International Dreamlove S.L.

Pol. Ind. Los palillos C / 6, 27

41500 Alcalá de Guadaíra (Sevilla) - Spain

+34 955 630 377

info@dreamlove.es

www.dreamlove.es